

Babylock Model Number:

BL20A, BL80, BL90, BL200, BL202, BL302, BL400, BL402, BL415, BL428K, BL500, BL500A (Jane), BL702, BL713, BL722, BL1500, BL1550, BL1556, BL1750, BL2000, BL2200, BL4350D, BL5260, BL5260D, BL5280E, BL5280ED, BL5280E, BL5360ED, BL5370ED, BL5380ED, BL3-437, BL3-437D, BL4-415, BL4-428D, BL4-728, BL4-728D, BL4-736, BL4-738, BL4-738D, BL4-738, BL4-736D, BL4-838D, BLE1, BLE1/SX, BLE8 (Evolve), DBL34-60, BLSE200, BLSE300, BLQP, BLE1DX, BLE1LX, BLE1AT

Bernette Model Number:

715

Brother Model Number:

2001, 666, 3034D, BM2600, BM3500, JA1, L25, L35, LS-590, LS2125i, LS-2220, LX-3125E, PQ1500, PS21, VX808, VX809, VX847, VX1010, VX1020, VX1500, XL2600, XL2120, XL2121, XL2130, XL2140, XL2150, XL2220, XL2230, XL2240, XL2250, XL2600, XL2610, XL2620, XL3500, XL3500T, XL3510, XL3520, XL3750, XL3800, XL6562, XR33

Elna Model Number:

1500, T33, T34, T34D

Dressmaker Model Number:

6102FA, 7000FB, S-1000, S-3000

Elna Model Number:

100, 1010, 102, 103, 104, 110, 120, 130, 140, 149, 150, 200, 220, 225, 225i, 230, 240, 244, 244i, 245, 245i, 250, 255, 255i, 300, 1000, 1500, 1600

Euro Pro, Shark Model Number:

6130, 7133

Husqvarna Viking Model Number:

2780 Turissa

Janome (Newhome) Model Number:

108, 444, 592, 620, 625FA, 661 (Jem Gold 2), 670, 692, S-750, 900, 910, 920, 980, 990, 3125, L-372, L-373, 4119, 4618LE, Combi 10, MC5500, S650

Juki Model Number:

HZL-E61, HZL-E70, HZL-E71, MO-623, MO-644D, MO-654DE, MO-655

Kenmore Model Number:

385.19112

Morse Model Number:

4400

Necchi Model Number:

3102FB, 3204FB, 4575, 4795, 535FA, 537, 575, 6011

Pfaff Model Number:

204, 205, 206, 207, 208, 209, 210, 211

Riccar Model Number:

564DE, 777, 900, 925, 950, 950R, 1100, 1570, 1900, 1925, R200, R250, R550, R551, R581, R591, R650, R700, R750, R918, RL333, RL343, R550, R551, R650, R700, R1100, R1500, R1570, R1570FB, R1800, R1850, R1926, R1950, R3100, R7620, RE640, REC5900, REC6000, RL333, RL343, RL343DR, RL724E, RL739DE

Simplicity Model Number:

SL4300, SL4380ED, SL350, SL4350D, SL4360ED, SL4380BH, SL4390ED, SL370, SL370, SW2145

Singer Model Number:

1107, 1525, 1748, 2250, 2259, 2263, 2273, 2932, 3116, 3810, 3820, 3825, 6510, 7350, 8280, 8770

Universal Model Number:

KNS, UNL-60

White Model Number:

510, 622, 915, 944, 1099, 1409, 1415, 1418, 1477, 1505, 1525, 1740, 1760, 2037, 2360, 2838, 2999, 4040, 4075, SL34